




VARISCITE LTD

---

VHP-VS-SP Heat Sink Kit For:  
VAR-SOM-MX93, VAR-SOM-AM62, VAR-SOM-MX8M-  
PLUS, VAR-SOM-MX8M-MINI, VAR-SOM-MX8M-NANO

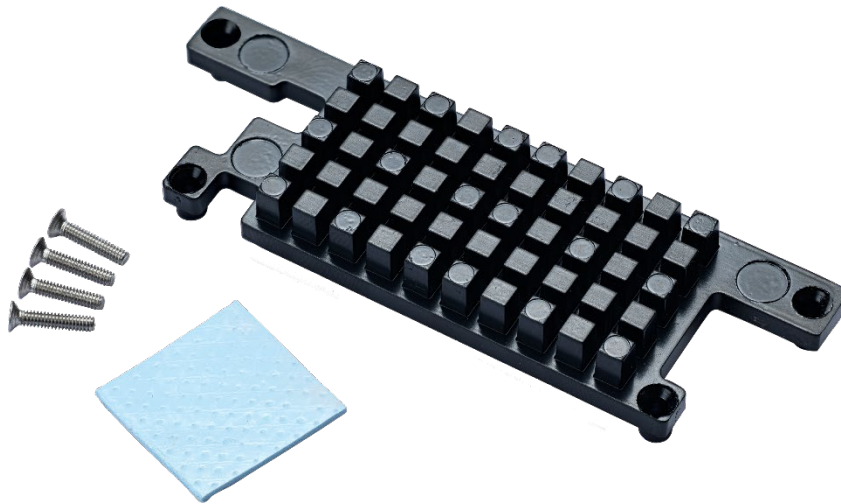

VARISCITE LTD.

# VHP-VS-SP Heat Sink

---

© 2021 Variscite Ltd.

All Rights Reserved. No part of this document may be photocopied, reproduced, stored in a retrieval system, or transmitted, in any form or by any means whether, electronic, mechanical, or otherwise without the prior written permission of Variscite Ltd.

No warranty of accuracy is given concerning the contents of the information contained in this publication. To the extent permitted by law no liability (including liability to any person by reason of negligence) will be accepted by Variscite Ltd., its subsidiaries or employees for any direct or indirect loss or damage caused by omissions from or inaccuracies in this document.

Variscite Ltd. reserves the right to change details in this publication without notice. Product and company names herein may be the trademarks of their respective owners.

Variscite Ltd.  
4, Hamelacha Street  
Zip 7152008  
Lod  
ISRAEL  
Tel: +972 (9) 9562910  
Fax: +972 (9) 9589477

# 1. Revision History

Revision	Date	Notes
1.00	Jun 06 2023	Initial – Preliminary

## 2. Table of Content


1.	Revision History .....	3
2.	Table of Content.....	4
3.	Heat Sink Kit Content.....	5
4.	Heat Sink Assembly .....	5
5.	Contact Information .....	7

### 3. Heat Sink Kit Content


- 1 x Heat sink.
- 1 x Thermal pad - TG-A6200, precut to 20x20, 1.5mm thick.  
Fits VAR-SOM-MX93, VAR-SOM-AM62 and VAR-SOM-MX8M-PLUS/MINI/NANO.
- 4 x Flat Head Phillips M2x10mm DIN965 SS screws (different screw types may be supplied).

### 4. Heat Sink Assembly

4.1 Attach the thermal pad on top of the i.MX93, AM62 and i.MX8M-PLUS/MINI/NANO processors located on the VAR-SOM-MX93, VAR-SOM-AM62, VAR-SOM-MX8M-PLUS/MINI/NANO. Make sure that the two plastic covers, on both sides of thermal pads are removed before attaching the pad (Please see note under section 4.4 for thermal paste option).

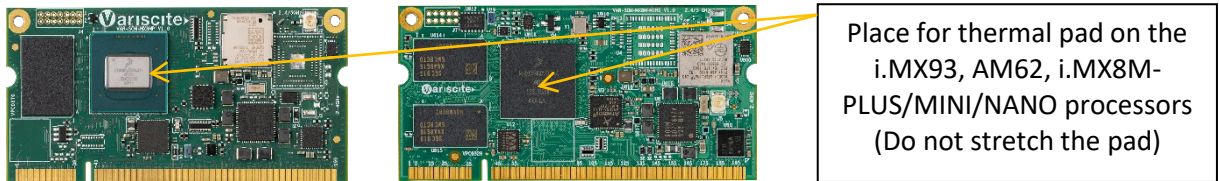

Assemble the heat sink on top side of the VAR-SOM-MX93, VAR-SOM-AM62, and VAR-SOM-MX8M-PLUS/MINI/NANO. Use the mechanical holes in order to align the heat sink to the VAR-SOM-MX93, VAR-SOM-AM62, and VAR-SOM-MX8M-PLUS/MINI/NANO.

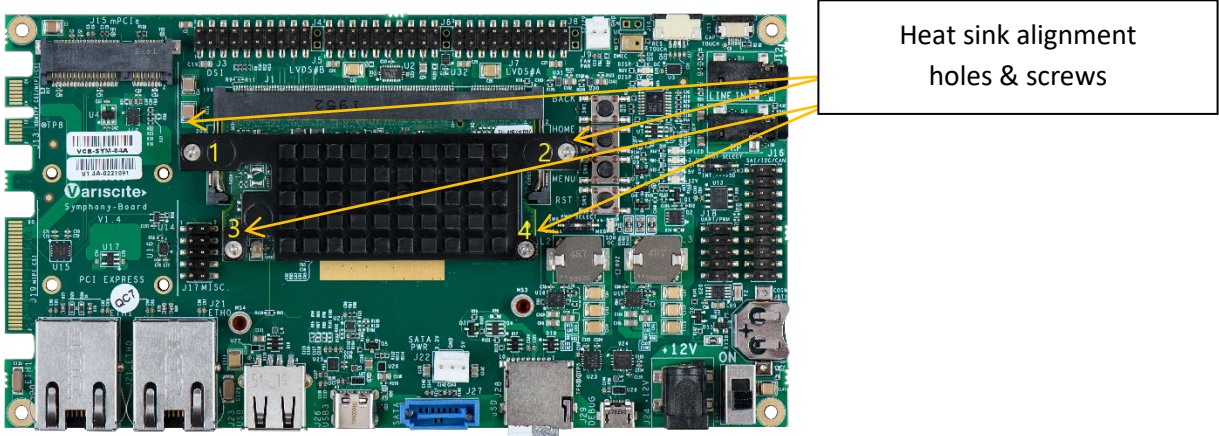

4.2 Insert the M2 screws to the heat sink holes.

4.3 Tight the heat sink to the VAR-SOM-MX93, VAR-SOM-AM62 and VAR-SOM-MX8M-PLUS/MINI/NANO using the supplied screws. Recommended torque for tightening the screws is ~1in-lb (~0.113N-m).

**Note:**


Due to tolerances of the related components (heat sink, thermal pad, PCB, i.MX8M processor) there might be a small gap between the heat sink and the PCB itself.

It is highly recommended to do the following:

1. Press slightly the heat sink on top of the thermal pad in order to squeeze the thermal pad on the processor.
2. Tighten screws 1, 2.
3. Tighten screws 3, 4. Pay attention when tightening the last screw that there is no extra pressure on the PCB, which might cause it to deform.
4. If you see excessive pressure is applied, you should not tighten the screw all the way and use Loctite or similar glue to lock the screws.
5. Another alternative is to use thermal paste (grease) instead of thermal pad which bridges the gap between the processor and the heat sink. The thermal paste should have similar thermal conductivity as the thermal pad, 6.0 watt/m-k (by JIS R2618 / ASTM D2326 standard).

**Heat Sink assembly sketch**

[Grab your reader's attention with a great quote from the document or use this space to emphasize a key point. To place this text box anywhere on the page, just drag it.]

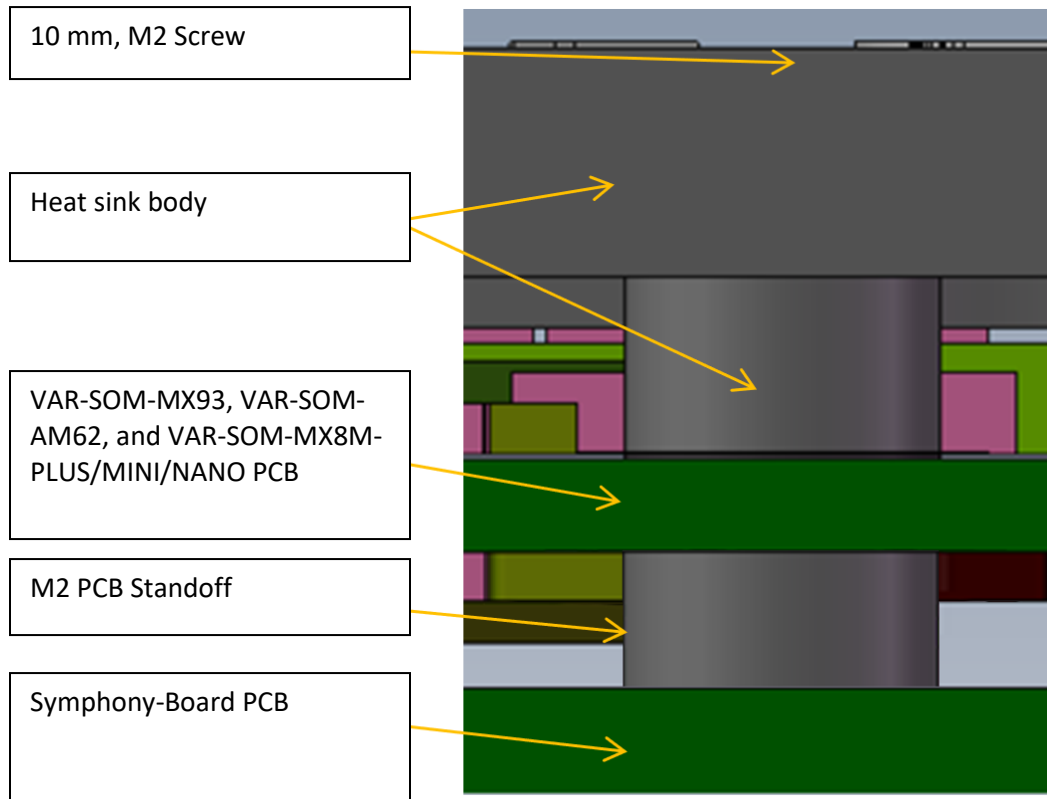

## 5. Contact Information

Headquarters:

**Variscite Ltd.**

4, Hamelacha Street

Zip 7152008

Lod

ISRAEL

Tel: +972 (9) 9562910

Fax: +972 (9) 9589477

Sales: [sales@variscite.com](mailto:sales@variscite.com)

Technical Support: [support@variscite.com](mailto:support@variscite.com)

Corporate Website: [www.variscite.com](http://www.variscite.com)

